



Updating the firmware for the Wireless Router (Model F5D6230-3)

The Process below assumes that you have already downloaded or have been e-mailed the Firmware update. Make sure you know the location of the Firmware file you downloaded. The instructions below do not cover helping you locate the file. We recommend that the file be saved on the desktop or in a folder that is easy to find.


1. Download or Copy the firmware update file to a location on your computer where you can easily locate it later.
2. Launch your Browser and type 192.168.2.1 to get to the router login page. Click "Login" to get to the Router's home page.

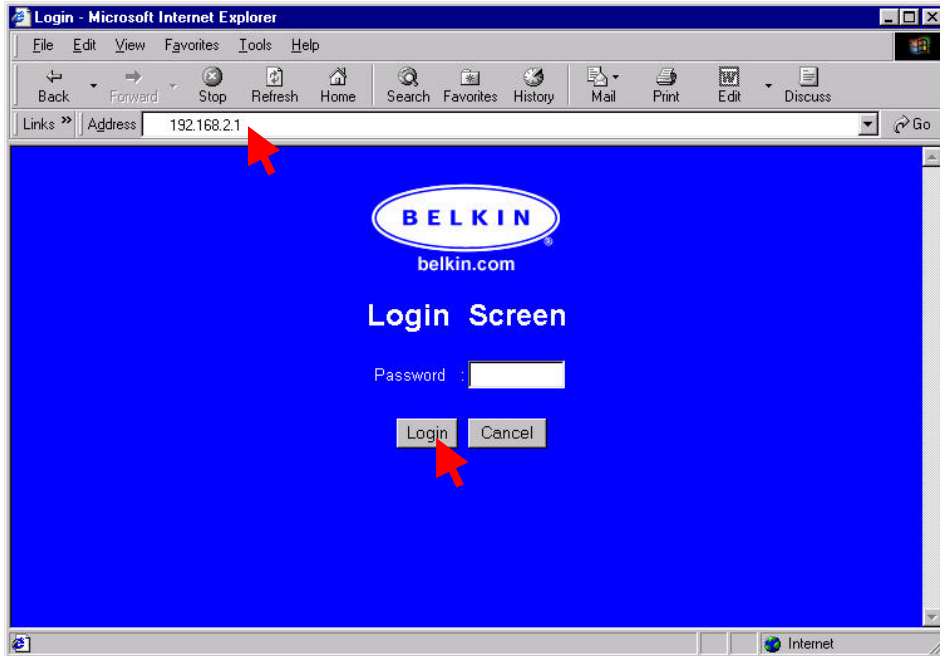


3. Click "Utilities" on the left side of the screen.

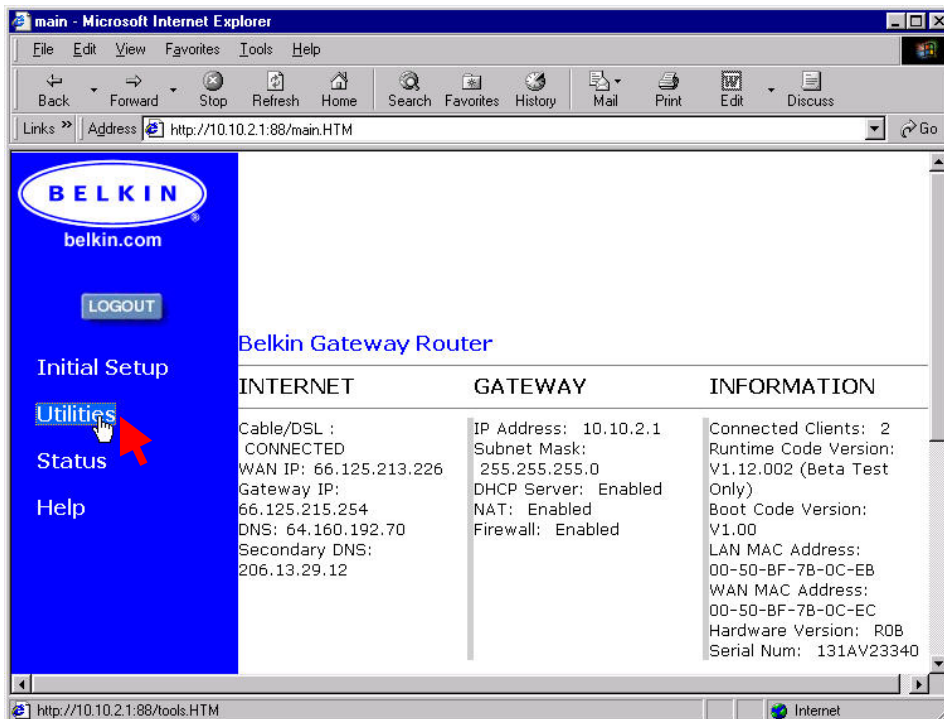


4. Click on "Update firmware"

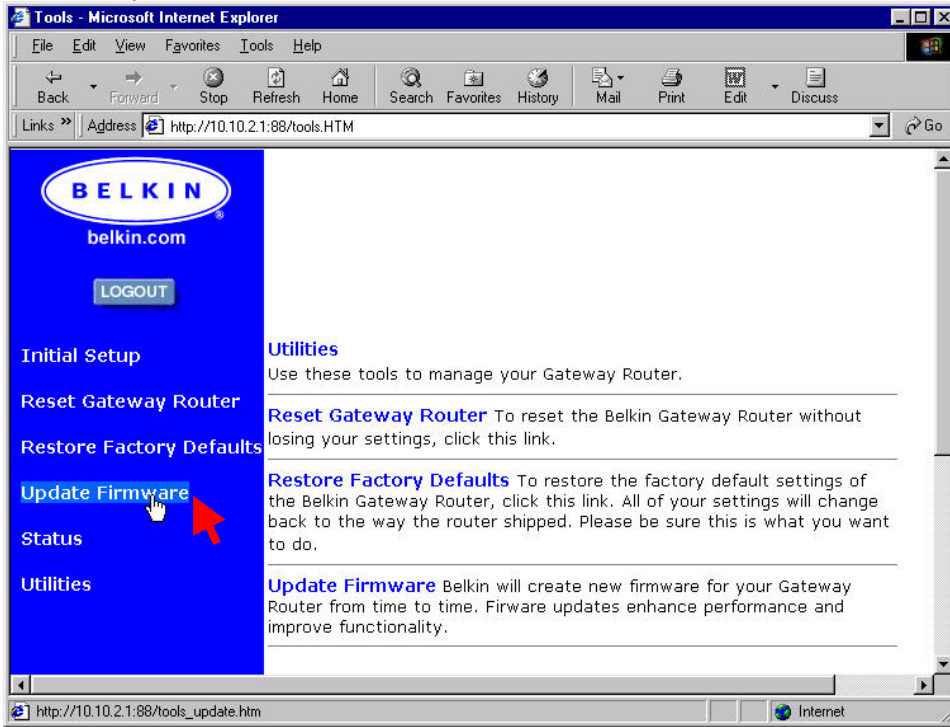


5. Click "Enter" on the Update Firmware page.

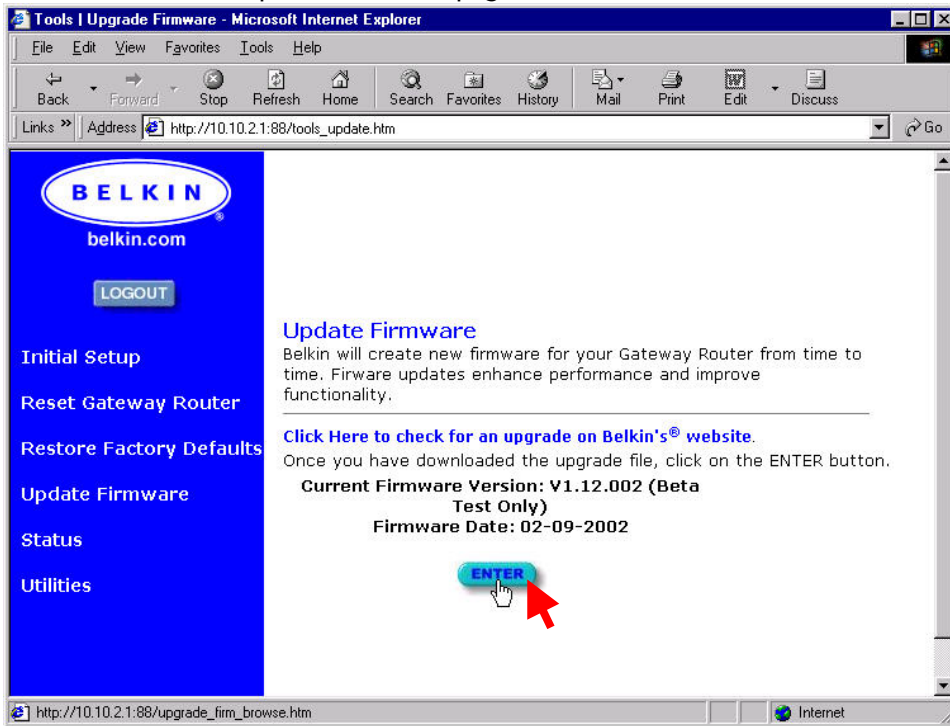

6. Click the "Browse" button and locate the update file (.bin) file on your computer.

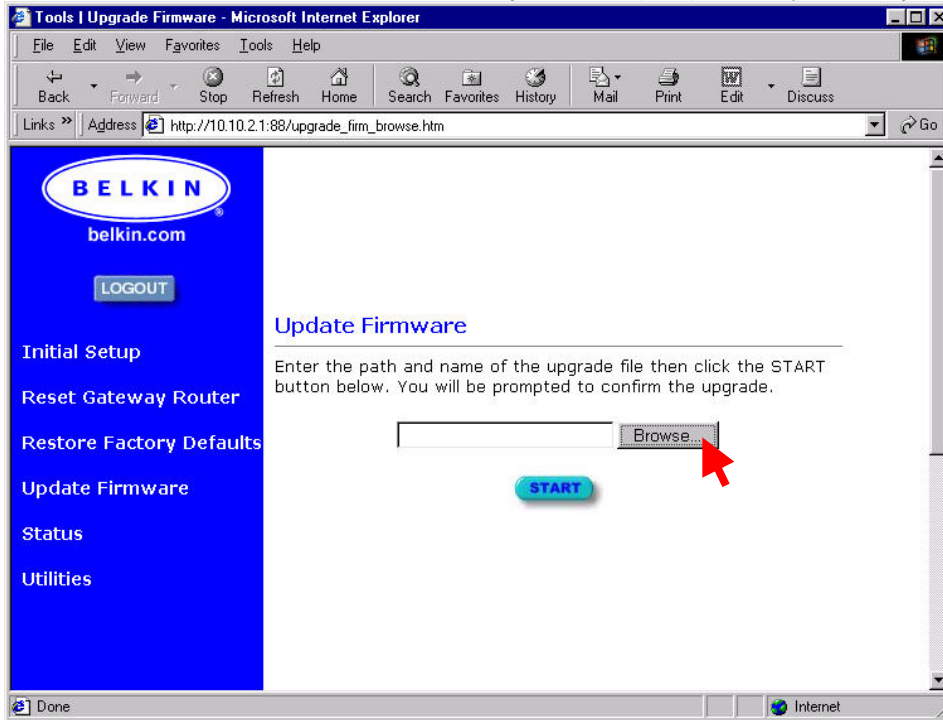


7. Click once on the file name in the browse window, then click "Open".

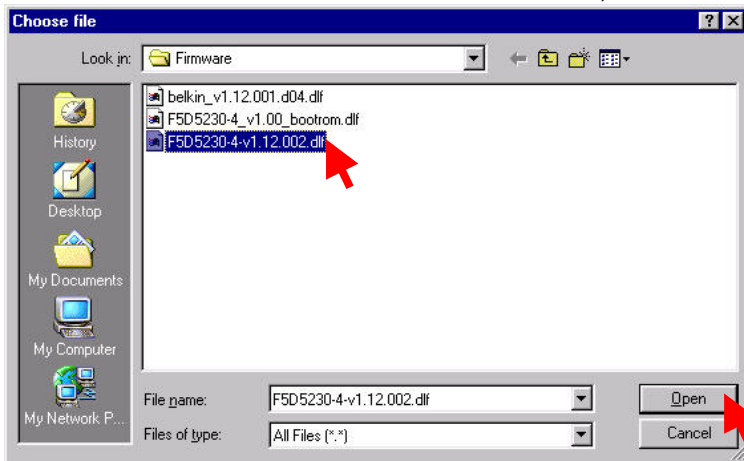


8. The file name will appear in the window next to the "Browse" button. Click "Start"
9. A message will appear "Do you want to continue with the update process?". Click "Yes"
10. Another reminder message will appear. Click "OK". The router will begin updating. The lights on the router will flash momentarily for about 30 seconds.
11. Wait until the Login screen appears again, then login.

12. Click "Utilities" on the left side of the screen.

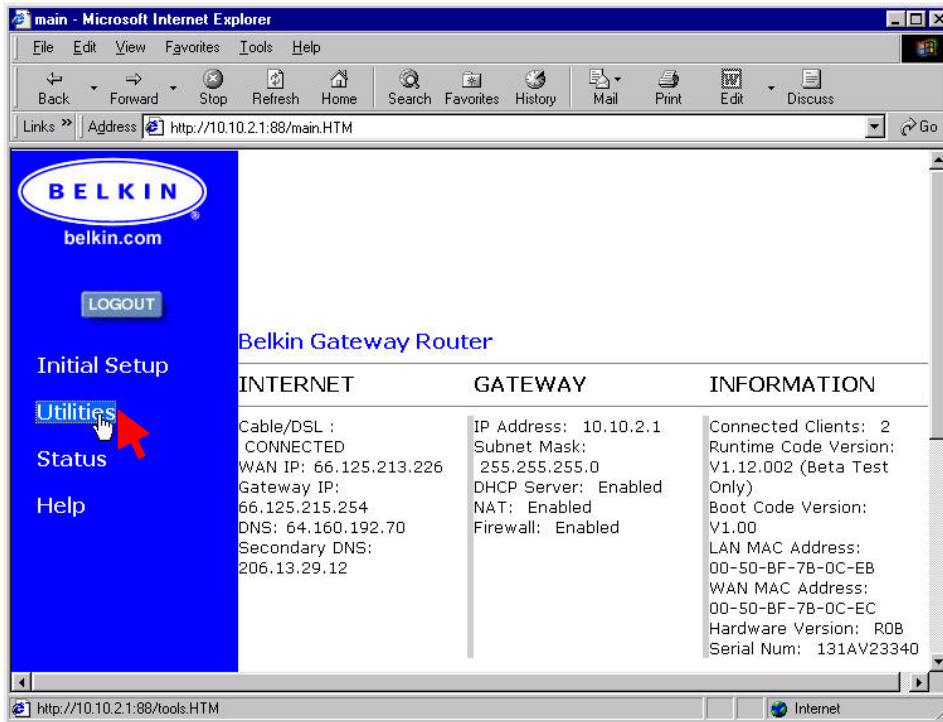

13. Click "Restore Factory Defaults" then click on the "Restore" button. A message will appear telling you all of your settings will be lost. Be sure that you have all of your settings so you can input them again later. Click "OK"

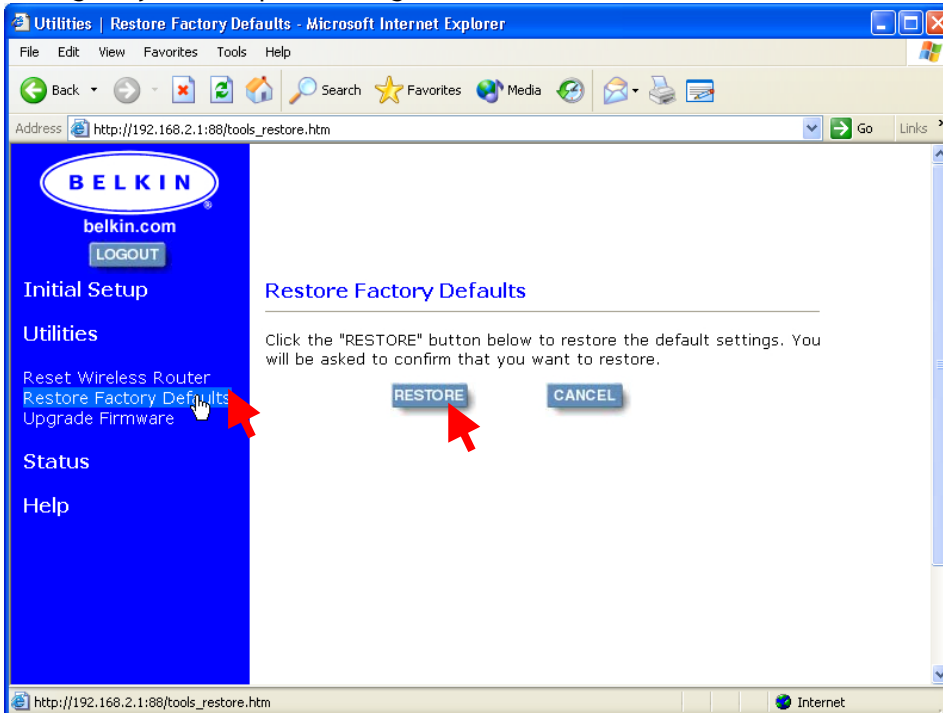

14. Wait until the Login screen appears again, then login.

15. Enter your connection settings as you originally did.

16. When you have entered your connection settings, check the status page to make sure it says "Connected" under "Internet". You are now finished.